Operating Manual

Refrigerated Counter Model SNACK 2200 TN, 3200 TN, 4200 TN

Item-No.: 323-1820, 323-1825, 323-1830



English - Translation

TABLE OF CONTENTS

SCOPE OF DELIVERY 3
STANDARDS AND DIRECTIVES 3
TECHNICAL OVERVIEW 4
SYMBOL EXPLANATIONS 5
GENERAL INSTRUCTIONS 6
SAFETY INSTRUCTIONS 7
DEVICE INSTALLATION 8
ELECTRICAL CONNECTION 8
STRUCTURE AND COMPONENTS 9
INITIAL START-UP 9
OPERATION – SETTINGS 10
CLEANING 11
MAINTENANCE 11
TAKING COOLING CABINET OUT OF OPERATION / STORAGE / TRANSPORT 11
TROUBLESHOOTING 12
WIRING DIAGRAM 13
EXPLODED VIEW: 323-1820 SNACK 2200 TN 14
EXPLODED VIEW – LEGEND: 323-1820 SNACK 2200 TN 15
EXPLODED VIEW: 323-1825 SNACK 3200 TN 17
EXPLODED VIEW – LEGEND: 323-1825 SNACK 3200 TN 18
EXPLODED VIEW: 323-1830 SNACK 4200 TN 20
EXPLODED VIEW – LEGEND: 323-1830 SNACK 4200 TN 21
PACKAGING DISPOSAL 23
DEVICE DISPOSAL 23

Dear Customer,

Congratulations on your new SARO refrigerated counter.

The product you have purchased has been designed for commercial use in restaurants, hotels, cafés, canteens, and supermarkets.
It is intended for the reliable cooling and fresh storage of food and beverages.
The refrigerated workbench is particularly suitable as a work and storage surface in professional kitchens, as it allows convenient food preparation with direct access to chilled ingredients.

Please read this instruction manual carefully before commissioning the unit.

We wish you much success and enjoyment with your new SARO product.

SCOPE OF DELIVERY

- 1 Operating Manual
- 1 Refrigerated Counter
- 2 Shelves (SNACK 2200 TN)
  3 Shelves (SNACK 3200 TN)
  4 Shelves (SNACK 4200 TN)

STANDARDS AND DIRECTIVES

The device complies with the current EU standards and directives:
Machinery Directive – MD 2006/42/EC,
Electromagnetic Compatibility Directive – EMC 2014/30/EU,
RoHS Directives 2011/65/EU and 2015/863/EU,

Ecodesign requirements according to Regulation (EU) 2015/1095, and
Energy Labelling according to Regulation (EU) 2015/1094.

The corresponding Declaration of Conformity can be provided upon request.

TECHNICAL OVERVIEW

Refrigerated Counter			
Model	SNACK 2200 TN	SNACK 3200 TN	SNACK 4200 TN
Order No.	323-1820	323-1825	323-1830
Material	Housing and interior: Stainless steel Worktop: Stainless steel		
Door(s)	2, self-closing, magnetic seal	3, self-closing, magnetic seal	4, self-closing, magnetic seal
Lock	None		
Shelves	2 height-adjustable 2 support rail sets	3 height-adjustable 3 support rail sets	4 height-äadjustable 4 support rail sets
On/Off switch	Yes		
Connection setup	Ready top lug in with Schuko plug		
Temperature control	Digital temperature control (DIXELL)		
Insulation	60 mm		
Cooling type	Forded air circulation		
Defrosting	Automatic		
Feet	4, height-adjustable	6, height-adjustable	
Temerpature range	-2 / +8 °C		
Shelf size	W 335 x D 430 mm	W 335 x D 430 mm	W 335 x D 430 mm
Gross capacity	260 litres	386 litres	511 litres
Climate class	Suitable for climate class 5, heavy-duty appliance		
Refrigerant type/quantity	R600 a (GWP 3) / 0,080 kg 	R600 a (GWP 3) / 0,080 kg 	R600 a (GWP 3) / 0,080 kg 
Connection	230 V / 50 Hz / 0,300 kW	230 V / 50 Hz / 0,300 kW	230 V / 50 Hz / 0,300 kW
Internal dimensions	W 799 x D 430 x H 564 mm	W 1234 x D 430 x H 564 mm	W 1669 x D 430 x H 564 mm
External dimensions	W 1360 x D 600 x H 890-950/1050 mm	W 1795 x D 600 x H 890-950/1050 mm	W 2230 x D 600 x H 890-950/1050 mm
Regulation for energy labeling	*VO (EU) 2015/1094 – Commercial Refrigerated Storage Cabinets* Group: *Counter Refrigerators*		
Energy efficiency class/ EEI	B (Spectrum A+++ bis G) / 26,50 % 	B (Spectrum A+++ bis G) / 29,60 % 	D (Spectrum A+++ bis G) / 57,10 % 
Energy consumption per year/day	580 kWh / 1,59 kWh	704 kWh / 1,93 kWh	1478 kWh / 4,05 kWh
Net/Gross weight	97 kg / 119 kg	137,30 kg / 157,30 kg	159 kg / 189 kg
GTIN [EAN-Code]	4017337068142	4017337068159	4017337068166

SYMBOL EXPLANATIONS



WARNUNG!
Dieses Symbol kennzeichnet Gefahren, die zu Verletzungen führen können. Halten Sie die angegebenen Hinweise zur Arbeitssicherheit unbedingt genau ein und verhalten Sie sich in diesen Fällen besonders vorsichtig.

WARNING!
This symbol indicates hazards that may cause injuries. Always follow the specified safety instructions precisely and exercise extra caution in these situations.



WARNUNG: GEFAHR DURCH ELEKTRISCHEN STROM!
Dieses Symbol macht auf gefährliche Situationen durch elektrischen Strom aufmerksam. Bei Nichtbeachten der Sicherheitshinweise besteht Verletzungs- oder Lebensgefahr!

WARNING: DANGER OF ELECTRIC SHOCK!
This symbol warns of hazardous situations caused by electric current. Failure to follow the safety instructions may result in injury or death!



WARNUNG: HEISSE OBERFLÄCHE - VERBRENNUNGSGEFAHR
Dieses Symbol weist auf die heiße Oberfläche des Gerätes, während des Betriebes und danach hin. Verbrennungsgefahr bei Nichtbeachten!

WARNING: HOT SURFACE - RISK OF BURNS
This symbol indicates the hot surface of the device during and after operation. Risk of burns if not observed!



WARNUNG: FEUERGEFÄHRLICHE STOFFE - VERBRENNUNGSGEFAHR
Dieses Symbol weist darauf hin, dass Gefahren aufgrund von feuergefährlichen Stoffen für Leben und Gesundheit von Personen bestehen. Verbrennungsgefahr bei Nichtbeachten!

WARNING: FLAMMABLE SUBSTANCES - RISK OF BURNS
This symbol indicates that flammable substances pose a danger to life and health. Risk of burns if not observed!

GENERAL INSTRUCTIONS

- Keep this operating manual handy near the appliance.
- The manufacturer/dealer cannot be held responsible for any damage resulting from failure to follow this manual.
- Failure to follow this manual will void the safety of the appliance.
- If the appliance is passed on to third parties, this operating manual must be included.
- This appliance must not be operated by children or persons with reduced physical, sensory, or mental capabilities, as they may not recognize the hazards of using electrical and/or refrigeration appliances, which could lead to accidents, fire, explosions, or property damage.
- After unpacking the appliance, make sure everything is in perfect condition. If you discover any damage, do not connect the appliance to the power supply; instead, contact your dealer.
- Check whether all components listed in the scope of delivery are present. If not, contact your dealer.
- Keep the appliance packaging. Only in its original packaging can the appliance be transported safely (e.g. for repair purposes, during relocation, etc.). Please note that all packaging components (plastic bags, cardboard, styrofoam parts, etc.) can be dangerous for children and must not be stored within their reach.
- If storing the packaging is not possible, separate the different packaging materials and take them to the nearest collection point for proper disposal.
- Do not use the appliance outdoors in the rain or in damp rooms.
- Do not operate the appliance unattended.
- Observe applicable accident prevention regulations and general safety standards for the area of use.
- Install the appliance in a dry, well-ventilated location on a level, stable surface.
- Ensure at least 10 cm of clearance between the rear of the display cabinet and the wall. Otherwise, the required cooling performance cannot be guaranteed.
- Do not install the appliance near heat sources such as heaters, stoves, ovens, open flames, or in direct sunlight, as this will affect the cooling performance.
- Ventilation slots must always be kept clear and must not be covered or obstructed.
- Before commissioning, observe the recommended ambient temperatures (climate class) for optimal cooling performance.
- Before connecting to the power supply and before commissioning, clean the appliance thoroughly as described under “Cleaning.”
- Before connecting the appliance, make sure that a grounded socket (Schuko) with 230 volts is available and that this matches the information on the rating plate. Power sources other than those indicated on the rating plate may cause overheating or defects in the appliance.
- Do not drill or pierce holes in the interior or exterior of the appliance, as this could damage the cooling system.
- For hygiene reasons, daily cleaning is recommended during operation.
- Always disconnect the appliance from the power supply before cleaning. Switch off the appliance first if it has an on/off switch or a thermostat with an “off” setting. Do the same if the appliance is not used for an extended period.
- The manufacturer/dealer cannot be held responsible for any damage resulting from failure to follow this manual. The safety of the appliance will also no longer be guaranteed.
- In the event of a malfunction/failure, disconnect the appliance from the power supply and contact your dealer. Repairs will be carried out with original spare parts by or on behalf of the dealer.

SAFETY INSTRUCTIONS

- Improper use and mishandling can lead to malfunctions of the appliance and injuries to the user.
- This appliance is neither suitable nor intended for storing medicines or flammable, combustible, or explosive substances.
- Observe the applicable accident prevention regulations and general safety standards for the area of use.
- Ensure a stable position on a dry, slip-resistant surface suitable for the appliance's weight, and install it in a well-ventilated location.
- Do not expose the appliance to direct sunlight, do not place it near heat sources (heater, stove, oven, open fire), and do not place it on hot surfaces, as this will affect cooling performance.
- Do not store flammable or explosive substances near the appliance.



- Do not carry out work with flammable substances near the appliance (such as paint or spray paint). Otherwise, fire or explosion may occur.
- The appliance requires sufficient space for air circulation and cooling: 10 cm on each side and at the back.
- Do not place heavy objects, loads, or liquids on the appliance.
- Ensure that the appliance's air inlet and outlet openings are always free of dirt. Check them regularly and remove any dust deposits using a vacuum cleaner.
- Do not cover or block the air openings.
- Do not tilt the appliance more than 45 degrees.
- Before connecting to your power supply, check whether the type of current and mains voltage correspond to the information on the rating plate. Operation is only possible if they match, in order to avoid accidents or defects.



- Do not use adapters, multiple sockets, or extension cords; otherwise, cables/wires may quickly overheat, especially if other appliances are connected. This increases the risk of fire.
- Do not move the appliance while it is in operation.
- Before moving the appliance, switch it off (if a switch is available) and unplug it.
- Always unplug by pulling on the plug housing, never the cable.
- Make sure the appliance does not tip over when being moved, as this may cause injuries.
- Once the appliance is set up again, wait 2 hours before switching it back on.
- If transported over a longer distance, allow the appliance to stand for approx. 24 hours before commissioning to prevent damage or accidents.
- After a power failure or after unplugging briefly, switch the appliance off, wait 5 minutes, then plug it back in and restart it.
- Do not let the power cord hang over sharp edges, do not crush it, and keep it away from hot objects and open flames.
- Ensure the cord cannot be pulled accidentally or tripped over.
- Check the cord regularly. If damaged, e.g. crushed, it must be replaced by a qualified technician.
- Do not touch the appliance, cord, or plug with wet or damp hands.
- Caution! The appliance remains live as long as it is connected to the mains.
- Protect the appliance from moisture.
- Do not clean the appliance with a water jet.
- The appliance must not be immersed in water or other liquids or splashed with liquids. If the appliance does get wet, unplug it immediately and have it inspected by a qualified technician before reuse. Danger of electric shock!
- A damaged appliance must not be used! Disconnect it from the mains and contact your dealer.



- Never attempt to open or repair the appliance yourself. Danger to life!
- Do not touch the compressor, as it may cause burns.
- Do not drill or puncture the appliance, neither from outside nor inside.
- Do not install other devices in the refrigeration unit and do not attach foreign objects.
- Do not interfere with the refrigeration circuit! This must only be done by a professional. Refrigerants R600a and R290 are environmentally friendly, but they are colorless, almost odorless, flammable gases; heavier than air; and in high concentrations narcotic and asphyxiating.
- Repairs must be carried out by qualified personnel using original spare parts.
- Always disconnect the appliance from the mains before cleaning and also during longer periods of non-use.
- Keep the door open only briefly to maintain the internal temperature.

DEVICE INSTALLATION

Place the appliance in a dry and well-ventilated room. Ensure a stable position on a dry, slip-resistant surface.

Position the appliance at least 10 cm away from the wall at the back to allow sufficient air circulation at all times. Leave at least 30 cm of space above the appliance and 10 cm on each side.

Performance and energy consumption may be affected by ambient temperature or direct sunlight. Therefore, do not expose the appliance to direct sunlight and do not place it near a stove, radiator, or any other heat source.

Ensure that the power plug is always easily accessible and can be disconnected from the mains without difficulty.

Arrange the appliance's shelves so that the spacing corresponds to the height of your stored goods.



After delivery or transportation of the appliance, do not connect it to the power supply until it has been left to stand for at least 24 hours. This is absolutely necessary to allow the refrigerant to settle in the compressor.

ELECTRICAL CONNECTION

After long transportation, the appliance should only be put into operation after 24 hours, and likewise after being strongly tilted. This allows the refrigeration circuit to stabilize and the refrigerant to redistribute evenly, preventing defects or malfunctions. After short movement or tilting of less than 45 degrees, please wait 2 hours before connecting the appliance.


Before connecting the appliance, make sure that the voltage and frequency of the power supply match the information on the rating plate! Using a different voltage may cause the appliance to overheat.

Connect the appliance only to a grounded socket with protective contact and a 230-volt connection.

Once the appliance is connected, wait about one hour to allow the interior to cool down sufficiently before loading it with goods. After a power failure or if the appliance has been disconnected from the mains, wait at least 5 minutes before reconnecting and restarting the appliance!

If the appliance is restarted immediately after being switched off, the fuse may trip and interrupt the power supply. In addition, the compressor may become overloaded and damaged.

STRUCTURE AND COMPONENTS

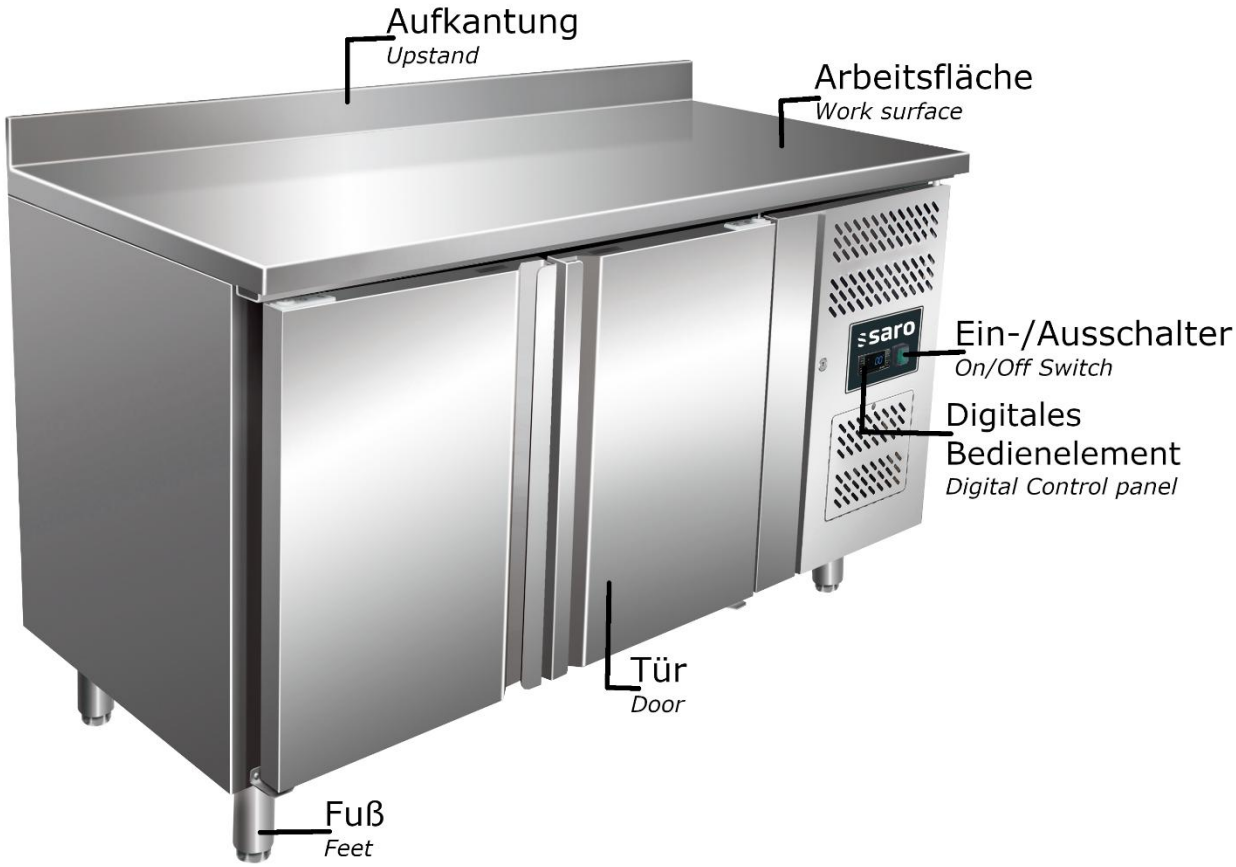

INITIAL START-UP

Before first use:
Unpack the appliance, check it for completeness, and set it up (see *Installation*). Clean the appliance (see *Cleaning*).
Connect the cleaned refrigeration unit (see *Electrical connection*) to a 230 V socket.
Only once the desired temperature has been reached (place your hand on the air intake to ensure it is sufficiently cold), load the appliance with your goods.

OPERATION – SETTINGS



1. Switching on

- Plug in the power cord.
- Set the power switch to [I].
- The appliance will display the current temperature.

---

2. Unlocking / Locking the control panel

- **Press the ▲ and ▼ keys simultaneously for 3 seconds.**
- The display shows:
  - PON (unlocked)
  - POF (locked)

---

3. Setting the operating temperature

1. Press the SET key → the display starts flashing.
2. Use ▲ or ▼ to set the desired temperature.
3. Press the SET key again to save.

---

4. Manual defrosting

- Press and hold the AUX key for 2 seconds.
- The defrost indicator light illuminates → defrost cycle active.

CLEANING

Wipe the exterior and interior surfaces with a damp, soft cloth.
A mild dishwashing detergent may be used.
Wipe again with clean water (without detergent), then dry thoroughly.
The glass shelves can be removed for easier cleaning; clean them in the same way.
Do not use harsh, bleaching, caustic, or abrasive cleaning agents/tools, as these may damage or scratch the surfaces.
For the glass surfaces, a standard glass cleaner and a soft cloth may also be used. However, ensure that only the glass is moistened and that no large amounts of liquid run into the cabinet.

MAINTENANCE

The refrigeration unit requires very little maintenance. Approximately every 2 months, check the ventilation slots for dirt. Brush them off with a soft brush while simultaneously removing the dirt with a vacuum cleaner.

TAKING COOLING CABINET OUT OF OPERATION / STORAGE / TRANSPORT


Remove all food, switch off the appliance, and unplug it.
Clean the appliance thoroughly inside and outside, then leave the door open to allow sufficient drying.
If the appliance is dry and will not be used for an extended period, store it in a dry, dust-free, and cool place. Ideally, cover the appliance or use the original packaging to protect it from damage.
Ensure the appliance is secured against children or pets climbing inside, as this could result in entrapment.
If only the packaging materials are stored, please note that components such as plastic bags, cardboard, and styrofoam parts can be dangerous for children if they play with them unsupervised (e.g., risk of suffocation).
For transportation, use the original packaging to optimally protect the appliance against shocks, sharp edges, weather conditions, etc. Do not tilt the appliance more than 45 degrees, do not expose it to moisture or rain, and avoid heavy impacts.
After transportation, the appliance must stand still for approx. 24 hours before being reconnected. Otherwise, malfunctions may occur, as the refrigerant and oil need time to redistribute and settle correctly.

TROUBLESHOOTING

Problem	Cause and Solution
The unit does not work	- Check whether the mains plug is correctly inserted into the socket - Check the cable. If it is damaged, it must be replaced by a qualified technician.
The unit does not reach the desired temperature	- Is the main switch on? - Is the temperature set correctly? - Is the unit in a defrosting phase or has it just completed one? - Is the evaporator covered with ice? - Is the unit located near heat sources, or does the ambient temperature exceed the maximum limit? - Make sure stored food does not block proper closing oft he doors or drawers. - Were the food items too hot when placed inside, too many items loaded, or poorly arranged? If there is something placed under the unit or if the air vents inside are blocked, air circulation is obstructed
The unit leaks water	- Is the drain blocked? - Is the unit standing level?
The unit is noisy	- Are all screws and nuts tight? - Ist the unit leveled and do the feet stand firmly on the ground?
If the problem cannot be solved by these simple troubleshooting steps, please contact your dealer.	

<u>The following are not malfunctions:</u>
The sound of running water may be heard when the refrigeration unit is operating. This is normal, as the refrigerant is circulating within the system.
During damp weather, condensation may form on the outside of the appliance. This is not a malfunction; the cause is high humidity. Simply wipe off the condensation with a cloth


WIRING DIAGRAM

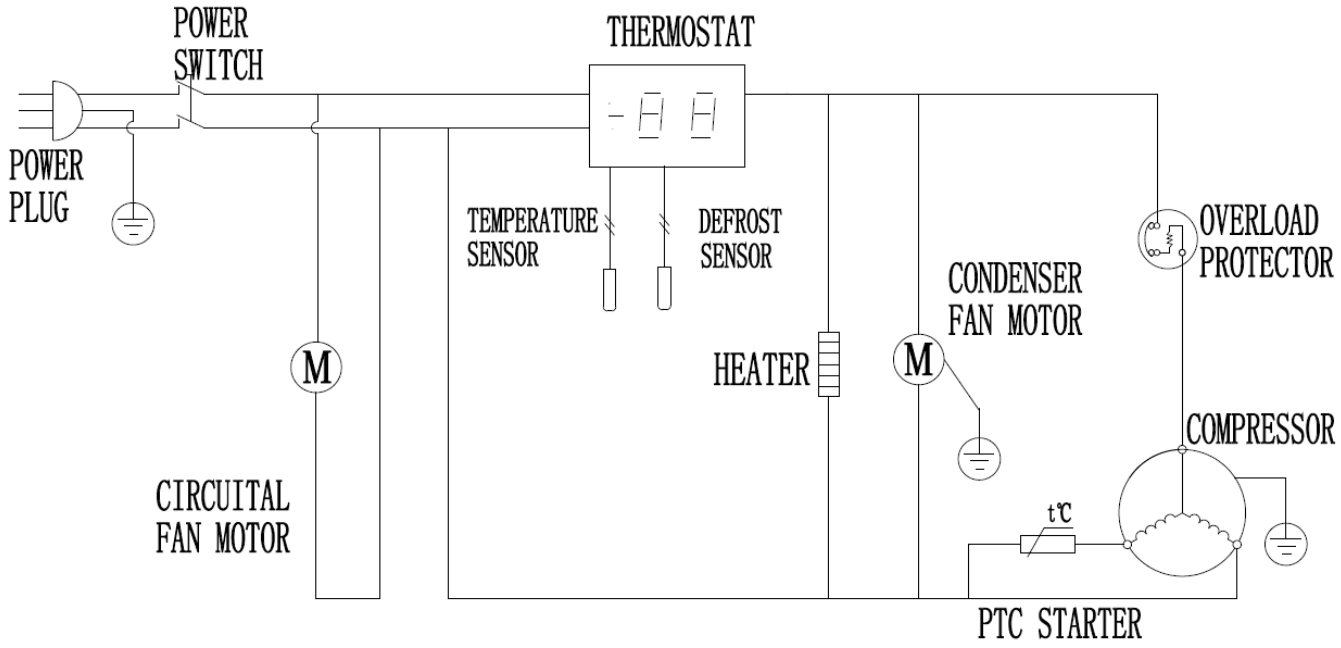

Übersetzung zum Schaltplan:

Power Plug	Netzstecker
Power Switch	Netzschalter
Circuital Fan Motor	Umluftventilatormotor
Thermostat	Thermostat
Temperature Sensor	Temperatursensor
Defrost Sensor	Abtausensor
Heater	Heizung
Condenser Fan Motor	Verflüssigerlüftermotor
Overload Protector	Überlastschutz
Compressor	Kompressor
PTC Starter	PTC-Anlasser

EXPLODED VIEW: 323-1820 SNACK 2200 TN

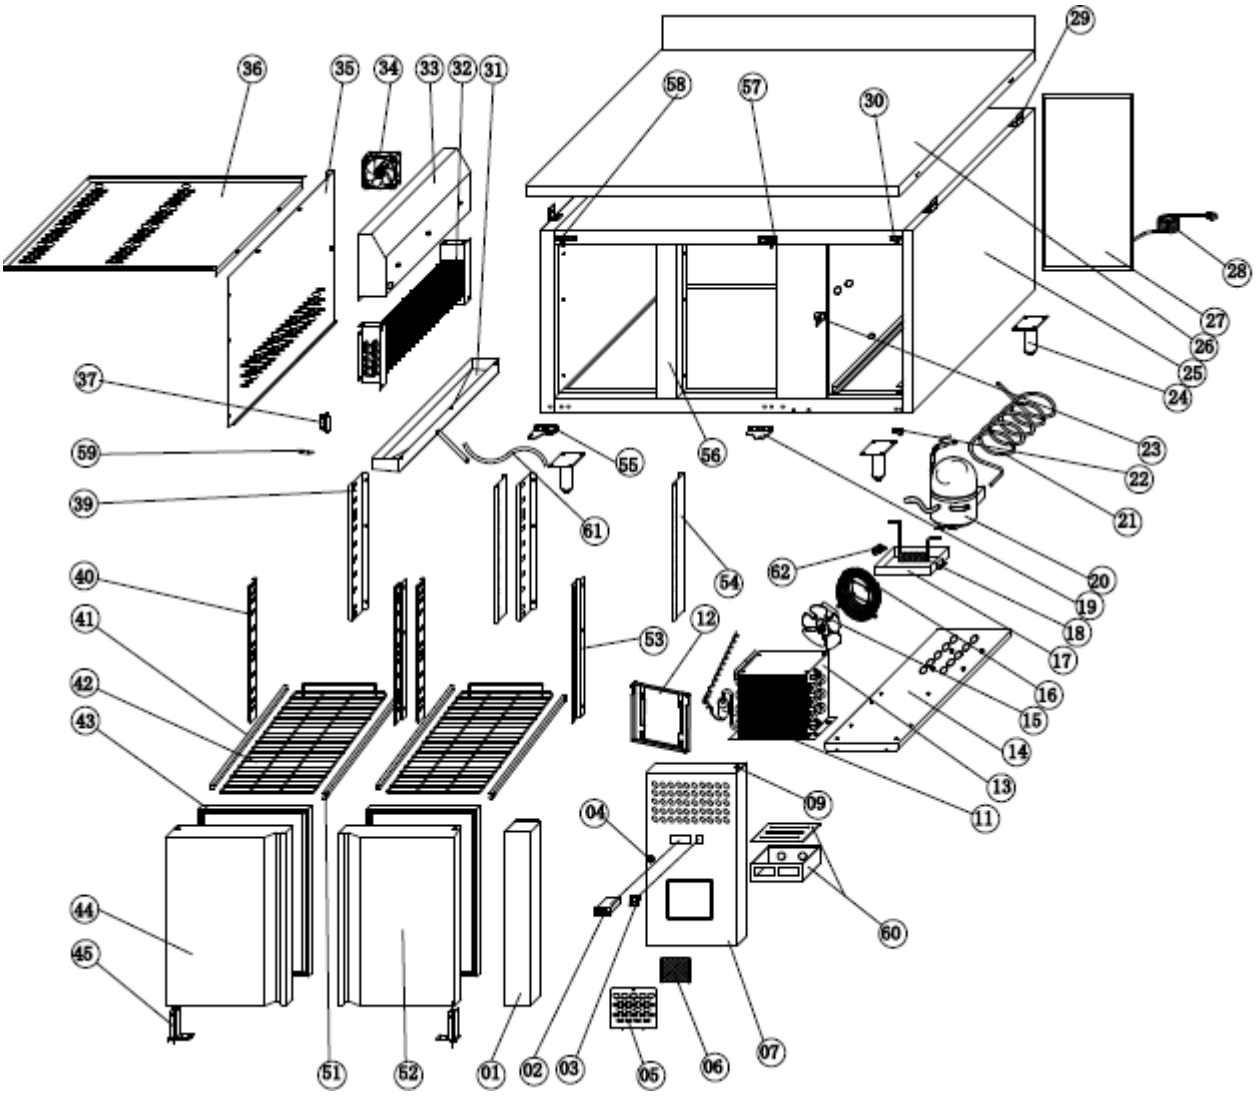


EXPLODED VIEW – LEGEND: 323-1820 SNACK 2200 TN

1	Fixed front panel	Feste Frontblende
2	Thermostat	Thermostat
3	Main switch	Hauptschalter
4	Lock	Schloss
5	Air flow window	Lüftungsklappe
6	Filter	Luftfilter
7	Front panel	Frontblende / Bedienblende
9	Bushing	Buchse
11	Filter drier	Filtertrockner
12	Condenser fan support	Kondensatorlüfter-Halterung
13	Condenser	Kondensator
14	Unit board	Montageplatte
15	Condenser fan	Kondensatorlüfter
16	Basket guard grills	Schutzgitter
17	Water box	Verdunsterschale
18	Evaporate pipe	Heißgasrohr
19	Door down hinge right	Unteres Türscharnier rechts
20	Compressor	Kompressor
21	Suction pipe	Saugleitung
22	Front panel down hinge	Unteres Scharnier für Frontblende
23	Lock hook	Schlosshaken
24	Feet	Füße
25	Body	Gehäuse
26	Top	Deckel
27	Unit room cover	Hintere Geräteraumabdeckung
28	Plug	Zuleitung
29	Top fixed board	Deckelbefestigung
30	Front panel up hinge	Oberes Scharnier für Frontblende
31	Evaporator water pan	Verdampfer-Tauwasserwanne
32	Evaporator	Verdampfer
33	Fan support	Lüfterhalterung
34	Circuit fan	Verdampferlüfter
35	Evaporator cover	Verdampferabdeckung
36	Air flow conduct board	Luftlführungsplatte
37	Sensor fixed box	Sensorbefestigungskasten
39	Back support left	Hintere Stütze links
40	Front support left	Vordere Stütze links
41	Guide left	Laufleiste links
42	Shelf	Rost
43	Gasket	Dichtung
44	Left door	Tür links
45	Door spring hinge	Türfeder-Scharnier
51	Guide right	Laufleiste rechts
52	Right door	Tür rechts
53	Front support right	Vordere Stütze rechts
54	Back support right	Hintere Stütze rechts

55	Door hinge left	Unteres Türscharnier links
56	Middle bridge	Mittelere Brücke
57	Door up hinge right	Oberes Türscharnier rechts
58	Door up hinge left	Oberes Türscharnier links
59	Sensor	Sensor
60	Junction box	Anschlusskasten mit Deckel
61	Drain pipe	Abflussrohr
62	Drain pipe fixer	Abflussrohrhalter

EXPLODED VIEW: 323-1825 SNACK 3200 TN

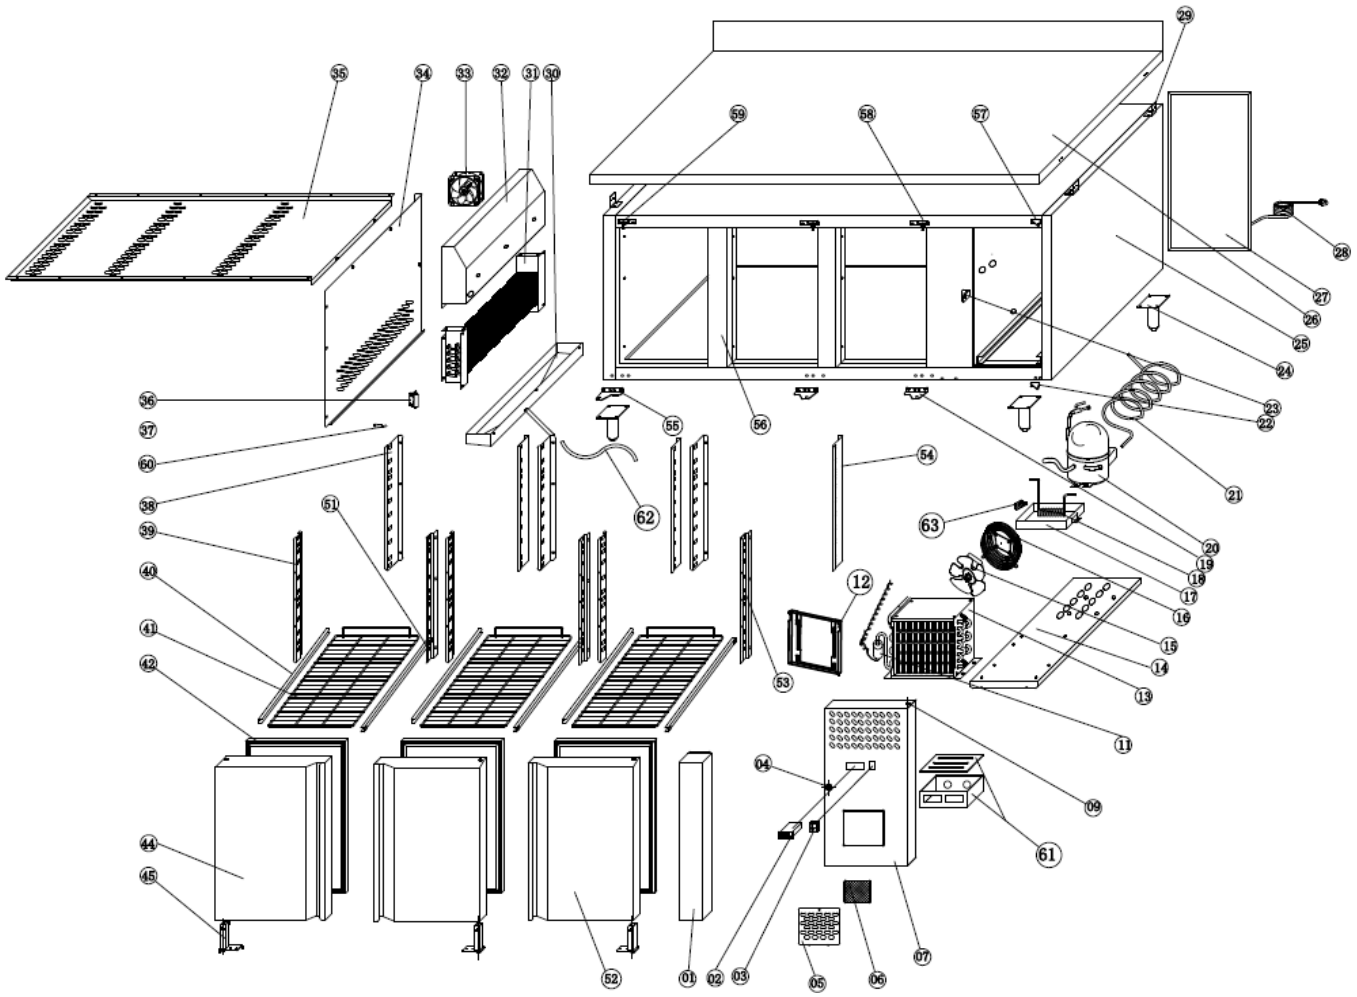


EXPLODED VIEW – LEGEND: 323-1825 SNACK 3200 TN

1	Fixed front panel	Feste Frontblende
2	Thermostat	Thermostat
3	Main switch	Hauptschalter
4	Lock	Schloss
5	Air flow window	Lüftungsklappe
6	Filter	Luftfilter
7	Front panel	Frontblende / Bedienblende
9	Bushing	Buchse
11	Filter drier	Filtertrockner
12	Condenser fan support	Kondensatorlüfter-Halterung
13	Condenser	Kondensator
14	Unit board	Montageplatte
15	Condenser fan	Kondensatorlüfter
16	Basket guard grills	Schutzgitter
17	Water box	Verdunsterschale
18	Evaporate pipe	Heißgasrohr
19	Door down hinge right	Unteres Türscharnier rechts
20	Compressor	Kompressor
21	Suction pipe	Saugleitung
22	Front panel down hinge	Unteres Scharnier für Frontblende
23	Lock hook	Schlosshaken
24	Feet	Füße
25	Body	Gehäuse
26	Top	Deckel
27	Unit room cover	Hintere Geräteraumabdeckung
28	Plug	Zuleitung
29	Top fixed board	Deckelbefestigung
30	Evaporator water pan	Verdampfer-Tauwasserwanne
31	Evaporator	Verdampfer
32	Fan support	Lüfterhalterung
33	Circuit fan	Verdampferlüfter
34	Evaporator cover	Verdampferabdeckung
35	Air flow conduct board	Luftlführungsplatte
36	Sensor fixed box	Sensorbefestigungskasten
38	Back support left	Hintere Stütze links
39	Front support left	Vordere Stütze links
40	Guide left	Laufleiste links
41	Shelf	Rost
42	Gasket	Dichtung
44	Door left	Tür links
45	Door spring hinge	Türfeder-Scharnier
51	Guide right	Laufleiste rechts
52	Door right	Tür rechts
53	Front support right	Vordere Stütze rechts

54	Back support right	Hintere Stütze rechts
55	Door down hinge left	Unteres Türscharnier links
56	Middle bridge	Mittelere Brücke
57	Front panel up hinge	Oberes Scharnier für Frontblende
58	Door up hinge right	Oberes Türscharnier rechts
59	Door up hinge left	Oberes Türscharnier links
60	Sensor	Sensor
61	Junction box cover	Anschlusskasten mit Deckel
62	Drain pipe	Abflussrohr
63	Drain pipe fixer	Abflussrohrhalter

EXPLODED VIEW: 323-1830 SNACK 4200 TN

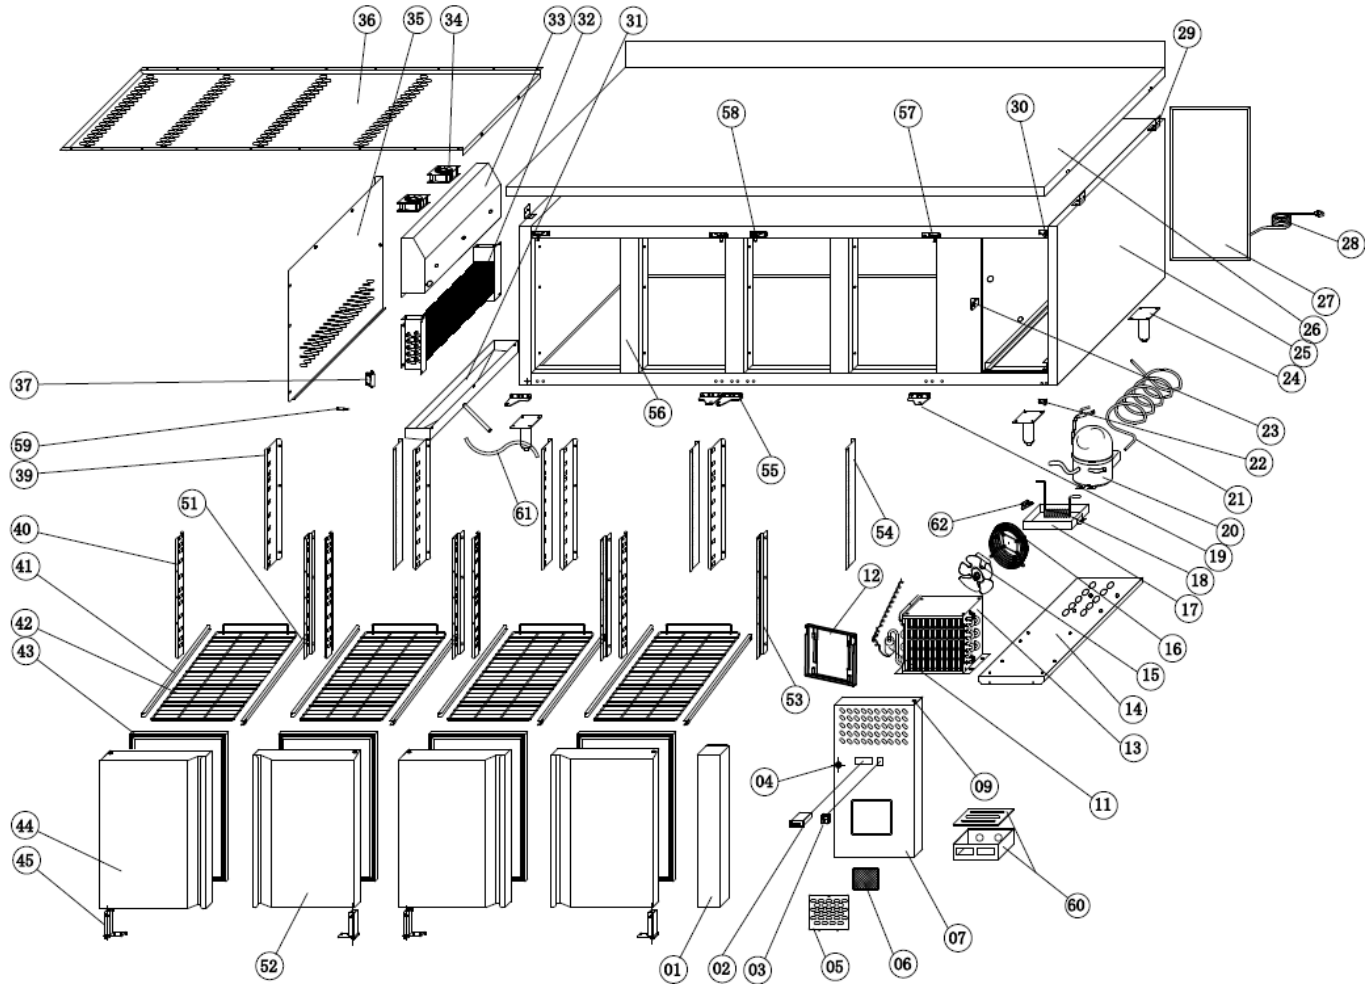

EXPLODED VIEW – LEGEND: 323-1830 SNACK 4200 TN

1	Fixed front panel	Feste Frontblende
2	Thermostat	Thermostat
3	Main switch	Hauptschalter
4	Lock	Schloss
5	Air flow window	Lüftungsklappe
6	Filter	Luftfilter
7	Front panel	Frontblende / Bedienblende
9	Bushing	Buchse
11	Filter drier	Filtertrockner
12	Condenser fan support	Kondensatorlüfter-Halterung
13	Condenser	Kondensator
14	Unit board	Montageplatte
15	Condenser fan	Kondensatorlüfter
16	Basket guard grills	Schutzgitter
17	Water box	Verdunsterschale
18	Evaporate pipe	Heißgasrohr
19	Door down hinge right	Unteres Türscharnier rechts
20	Compressor	Kompressor
21	Suction pipe	Saugleitung
22	Front panel down hinge	Unteres Scharnier für Frontblende
23	Lock hook	Schlosshaken
24	Feet	Füße
25	Body	Gehäuse
26	Top	Deckel
27	Unit room cover	Hintere Geräteraumabdeckung
28	Plug	Zuleitung
29	Top fixed board	Deckelbefestigung
30	Front panel up hinge	Oberes Scharnier für Frontblende
31	Evaporator water pan	Verdampfer-Tauwasserwanne
32	Evaporator	Verdampfer
33	Fan support	Lüfterhalterung
34	Circuit fan	Verdampferlüfter
35	Evaporator cover	Verdampferabdeckung
36	Air flow conduct board	Luftlführungsplatte
37	Sensor fixed box	Sensorbefestigungskasten
39	Back support left	Hintere Stütze links
40	Front support left	Vordere Stütze links
41	Guide left	Laufleiste links
42	Shelf	Rost
43	Gasket	Dichtung
44	Left door	Tür links
45	Door spring hinge	Türfeder-Scharnier
51	Guide right	Laufleiste rechts
52	Right door	Tür rechts

53	Front support right	Vordere Stütze rechts
54	Back support right	Hintere Stütze rechts
55	Door hinge left	Türscharnier links
56	Middle bridge	Mittlere Brücke
57	Door up hinge right	Oberes Türscharnier rechts
58	Door up hinge left	Oberes Türscharnier links
59	Sensor	Sensor
60	Junction box	Anschlusskasten mit Deckel
61	Drain pipe	Abflussrohr
62	Drain pipe fixer	Abflussrohrhalter

PACKAGING DISPOSAL



Please separate the packaging materials accordingly and take them to the appropriate collection points for recycling and environmental protection.

DEVICE DISPOSAL



Once the appliance has reached the end of its life, please dispose of it properly at a designated collection point for electrical devices.
Electrical appliances do not belong in household waste.
Your local authority can provide information on the locations and opening hours of disposal sites.
This is the only way to ensure that old appliances are disposed of and recycled correctly.
Thank you!

Made in P.R.C for:
SARO Gastro-Products GmbH
Sandbahn 6, 46446 Emmerich am Rhein, Germany
Tel. +49 (0) 2822 9258-0
Fax +49 (0) 2822 18192
E-Mail info@saro.de
Web www.saro.de

Note: Technical, design, and model changes as well as errors are subject to change without notice.