saro
Gastro-Products

# Operating Manual

## Bakery Refrigerator and Bakery Freezer
## B 800 TN, B 800 BT

Item-No.: 323-3106, 323-3108



323-3108



323-3106

English - Translation

**TABLE OF CONTENTS**

SCOPE OF DELIVERY ..... 3
STANDARDS AND DIRECTIVES ..... 3
TECHNICAL OVERVIEW ..... 4
SYMBOL EXPLANATIONS ..... 5
GENERAL INSTRUCTIONS ..... 6
SAFETY INSTRUCTIONS ..... 7
DEVICE INSTALLATION ..... 8
ELECTRICAL CONNECTION ..... 8
STRUCTURE AND COMPONENTS ..... 9
INITIAL START-UP ..... 9
OPERATION – SETTINGS ..... 10
CLEANING ..... 11
MAINTENANCE ..... 11
TAKING DEVICE OUT OF OPERATION / STORAGE / TRANSPORT ..... 11
TROUBLESHOOTING ..... 12
WIRING DIAGRAM 323-3106 Bakery Refrigerator B 800 TN ..... 13
WIRING DIAGRAM 323-3108 Bakery Freezer B 800 BT ..... 14
EXPLODED VIEW: 323-3106 B 800 TN ..... 15
EXPLODED VIEW – LEGEND: 323-3106 B 800 TN ..... 16
EXPLODED VIEW: 323-3108 B 800 BT ..... 17
EXPLODED VIEW – LEGEND: 323-3108 B 800 BT ..... 18
PACKAGING DISPOSAL ..... 20
DEVICE DISPOSAL ..... 20

**Dear Customer,**

**Congratulations on your new SARO (deep) refrigerator.**

**The product you have purchased has been designed for commercial use in bakeries, restaurants, hotels, cafés, canteens, and supermarkets.**
**It is intended for the reliable cooling and deep-freezing of baked goods, food, and ingredients.**
**The bakery refrigerator and freezer are particularly suitable for the safe storage of dough pieces, finished baked goods, and supplies to ensure long-term quality and freshness.**

**Please read the operating manual carefully before starting up the appliance.**

**We wish you much success with your new SARO product.**

## SCOPE OF DELIVERY

- 1 bakery refridgerator or 1 Bakery Freezer
- 1 operating manual

## STANDARDS AND DIRECTIVES

The device complies with the current EU standards and directives:
Machinery Directive – MD 2006/42/EC,
Electromagnetic Compatibility Directive – EMC 2014/30/EU,
RoHS Directives 2011/65/EU and 2015/863/EU,

Ecodesign requirements according to Regulation (EU) 2015/1095 and
Energy labelling according to Regulation (EU) 2015/1094.

The corresponding Declaration of Conformity can be provided upon request.

## TECHNICAL OVERVIEW

| Bakery Refridgerator and Bakery Freezer | | |
|---|---|---|
| **Model** | B 800 TN | B 800 BT |
| **Order No.** | 323-3106 | 323-3108 |
| **Material** | Housing: stainless steel | |
| **Door(s)** | 1, self-closing | |
| **Lock** | without | |
| **Sliding rails** | 10 | |
| **On/Off switch** | Yes | |
| **Power connection** | Ready-to-plug with safety plug (Schuko plug) | |
| **Lighting** | Brilliant internal LED lighting. This product contains a light source of energy efficiency class G | |
| **Temperature control** | Digital temperature control (DIXELL) | |
| **Insulation** | 65 mm | |
| **Cooling system** | Forced-air cooling | |
| **Defrosting** | Automatic | |
| **Feet** | 4 | |
| **Temperature range** | +2 / +8°C | -18 / -22°C |
| **Possible shelf size** | B 600 x T 800 mm<br>2x B 600 x T 400 mm | |
| **Gross volume** | 852 Liter | |
| **Climate class** | Suitable for climate class 5, high-performance appliance | |
| **Refrigerant / Qty.** | R290 (GWP 3) / 0,100 kg  | R290 (GWP 3) / 0,115 kg  |
| **Connection** | 230 V / 50 Hz / 0,350 kW | 230 V – 50 Hz – 0,675 kW |
| **Internal dimensions** | W 624 x D 861,5 x H 1410 mm | W 624 x D 861,5 x H 1410 mm |
| **External dimensions** | W 740 x T 990 x H 2010 mm | W 740 x T 990 x H 2010 mm |
| **VO EU Regulation** | VO (EU) 2015/1094 – Commercial refrigeration units<br>Group: Vertical refrigeration cabinets | |
| **Energy efficiency regulation / EEI** | C (Spectrum A+++ to G) / 38,60 %  | D (Spectrum A+++ to G) / 62,70 %  |
| **Energy consumption per year/day** | 573 kWh / 1,57 kWh | 2573 kWh / 7,05 kWh |
| **Net/Gross weight** | 155 / 160 kg | 160 / 170 kg |
| **GTIN (EAN code)** | 4017337036592 | 4017337036608 |

## SYMBOL EXPLANATIONS



**WARNUNG!**
Dieses Symbol kennzeichnet Gefahren, die zu Verletzungen führen können. Halten Sie die angegebenen Hinweise zur Arbeitssicherheit unbedingt genau ein und verhalten Sie sich in diesen Fällen besonders vorsichtig.

**WARNING!**
This symbol indicates hazards that may cause injuries. Always follow the specified safety instructions precisely and exercise extra caution in these situations.



**WARNUNG: GEFAHR DURCH ELEKTRISCHEN STROM!**
Dieses Symbol macht auf gefährliche Situationen durch elektrischen Strom aufmerksam. Bei Nichtbeachten der Sicherheitshinweise besteht Verletzungs- oder Lebensgefahr!

**WARNING: DANGER OF ELECTRIC SHOCK!**
This symbol warns of hazardous situations caused by electric current. Failure to follow the safety instructions may result in injury or death!



**WARNUNG: HEISSE OBERFLÄCHE - VERBRENNUNGSGEFAHR**
Dieses Symbol weist auf die heiße Oberfläche des Gerätes, während des Betriebes und danach hin. Verbrennungsgefahr bei Nichtbeachten!

**WARNING: HOT SURFACE - RISK OF BURNS**
This symbol indicates the hot surface of the device during and after operation. Risk of burns if not observed!



**WARNUNG: FEUERGEFÄHRLICHE STOFFE - VERBRENNUNGSGEFAHR**
Dieses Symbol weist darauf hin, dass Gefahren aufgrund von feuergefährlichen Stoffen für Leben und Gesundheit von Personen bestehen. Verbrennungsgefahr bei Nichtbeachten!

**WARNING: FLAMMABLE SUBSTANCES - RISK OF BURNS**
This symbol indicates that flammable substances pose a danger to life and health. Risk of burns if not observed!

## GENERAL INSTRUCTIONS

- Keep this operating manual handy near the appliance.
- The manufacturer/dealer cannot be held responsible for any damage resulting from failure to follow this manual.
- Failure to follow this manual will void the safety of the appliance.
- If the appliance is passed on to third parties, this operating manual must be included.
- This appliance must not be operated by children or persons with reduced physical, sensory, or mental capabilities, as they may not recognize the hazards of using electrical and/or refrigeration appliances, which could lead to accidents, fire, explosions, or property damage.
- After unpacking the appliance, make sure everything is in perfect condition. If you discover any damage, do not connect the appliance to the power supply; instead, contact your dealer.
- Check whether all components listed in the scope of delivery are present. If not, contact your dealer.
- Keep the appliance packaging. Only in its original packaging can the appliance be transported safely (e.g. for repair purposes, during relocation, etc.). Please note that all packaging components (plastic bags, cardboard, styrofoam parts, etc.) can be dangerous for children and must not be stored within their reach.
- If storing the packaging is not possible, separate the different packaging materials and take them to the nearest collection point for proper disposal.
- Do not use the appliance outdoors in the rain or in damp rooms.
- Do not operate the appliance unattended.
- Observe applicable accident prevention regulations and general safety standards for the area of use.
- Install the appliance in a dry, well-ventilated location on a level, stable surface.
- Ensure at least 10 cm of clearance between the rear of the display cabinet and the wall. Otherwise, the required cooling performance cannot be guaranteed.
- Do not install the appliance near heat sources such as heaters, stoves, ovens, open flames, or in direct sunlight, as this will affect the cooling performance.
- Ventilation slots must always be kept clear and must not be covered or obstructed.
- Before commissioning, observe the recommended ambient temperatures (climate class) for optimal cooling performance.
- Before connecting to the power supply and before commissioning, clean the appliance thoroughly as described under “Cleaning.”
- Before connecting the appliance, make sure that a grounded socket (Schuko) with 230 volts is available and that this matches the information on the rating plate. Power sources other than those indicated on the rating plate may cause overheating or defects in the appliance.
- Do not drill or pierce holes in the interior or exterior of the appliance, as this could damage the cooling system.
- For hygiene reasons, daily cleaning is recommended during operation.
- Always disconnect the appliance from the power supply before cleaning. Switch off the appliance first if it has an on/off switch or a thermostat with an “off” setting. Do the same if the appliance is not used for an extended period.
- The manufacturer/dealer cannot be held responsible for any damage resulting from failure to follow this manual. The safety of the appliance will also no longer be guaranteed.
- In the event of a malfunction/failure, disconnect the appliance from the power supply and contact your dealer. Repairs will be carried out with original spare parts by or on behalf of the dealer.

## SAFETY INSTRUCTIONS

- Improper use and mishandling can lead to malfunctions of the appliance and injuries to the user.
- This appliance is neither suitable nor intended for storing medicines or flammable, combustible, or explosive substances.
- Observe the applicable accident prevention regulations and general safety standards for the area of use.
- Ensure a stable position on a dry, slip-resistant surface suitable for the appliance's weight, and install it in a well-ventilated location.
- Do not expose the appliance to direct sunlight, do not place it near heat sources (heater, stove, oven, open fire), and do not place it on hot surfaces, as this will affect cooling performance.
- Do not store flammable or explosive substances near the appliance.



- Do not carry out work with flammable substances near the appliance (such as paint or spray paint). Otherwise, fire or explosion may occur.
- The appliance requires sufficient space for air circulation and cooling: 10 cm on each side and at the back.
- Do not place heavy objects, loads, or liquids on the appliance.
- Ensure that the appliance's air inlet and outlet openings are always free of dirt. Check them regularly and remove any dust deposits using a vacuum cleaner.
- Do not cover or block the air openings.
- Do not tilt the appliance more than 45 degrees.
- Before connecting to your power supply, check whether the type of current and mains voltage correspond to the information on the rating plate. Operation is only possible if they match, in order to avoid accidents or defects.



- Do not use adapters, multiple sockets, or extension cords; otherwise, cables/wires may quickly overheat, especially if other appliances are connected. This increases the risk of fire.
- Do not move the appliance while it is in operation.
- Before moving the appliance, switch it off (if a switch is available) and unplug it.
- Always unplug by pulling on the plug housing, never the cable.
- Make sure the appliance does not tip over when being moved, as this may cause injuries.
- Once the appliance is set up again, wait 2 hours before switching it back on.
- If transported over a longer distance, allow the appliance to stand for approx. 24 hours before commissioning to prevent damage or accidents.
- After a power failure or after unplugging briefly, switch the appliance off, wait 5 minutes, then plug it back in and restart it.
- Do not let the power cord hang over sharp edges, do not crush it, and keep it away from hot objects and open flames.
- Ensure the cord cannot be pulled accidentally or tripped over.
- Check the cord regularly. If damaged, e.g. crushed, it must be replaced by a qualified technician.
- Do not touch the appliance, cord, or plug with wet or damp hands.
- Caution! The appliance remains live as long as it is connected to the mains.
- Protect the appliance from moisture.
- Do not clean the appliance with a water jet.
- The appliance must not be immersed in water or other liquids or splashed with liquids. If the appliance does get wet, unplug it immediately and have it inspected by a qualified technician before reuse. Danger of electric shock!
- A damaged appliance must not be used! Disconnect it from the mains and contact your dealer.



- Never attempt to open or repair the appliance yourself. Danger to life!
- Do not touch the compressor, as it may cause burns.
- Do not drill or puncture the appliance, neither from outside nor inside.
- Do not install other devices in the refrigeration unit and do not attach foreign objects.
- Do not interfere with the refrigeration circuit! This must only be done by a professional. Refrigerants R600a and R290 are environmentally friendly, but they are colorless, almost odorless, flammable gases; heavier than air; and in high concentrations narcotic and asphyxiating.
- Repairs must be carried out by qualified personnel using original spare parts.
- Always disconnect the appliance from the mains before cleaning and also during longer periods of non-use.
- Keep the door open only briefly to maintain the internal temperature.

## DEVICE INSTALLATION

Place the appliance in a dry and well-ventilated room. Ensure a stable position on a dry, slip-resistant surface.

Position the appliance at least 10 cm away from the wall at the back to allow sufficient air circulation at all times. Leave at least 30 cm of space above the appliance and 10 cm on each side.

Performance and energy consumption may be affected by ambient temperature or direct sunlight. Therefore, do not expose the appliance to direct sunlight and do not place it near a stove, radiator, or any other heat source.

Ensure that the power plug is always easily accessible and can be disconnected from the mains without difficulty.

Arrange the appliance's shelves so that the spacing corresponds to the height of your stored goods.



After delivery or transportation of the appliance, do not connect it to the power supply until it has been left to stand for at least 24 hours. This is absolutely necessary to allow the refrigerant to settle in the compressor.

## ELECTRICAL CONNECTION

After long transportation, the appliance should only be put into operation after 24 hours, and likewise after being strongly tilted. This allows the refrigeration circuit to stabilize and the refrigerant to redistribute evenly, preventing defects or malfunctions. After short movement or tilting of less than 45 degrees, please wait 2 hours before connecting the appliance.

Before connecting the appliance, make sure that the voltage and frequency of the power supply match the information on the rating plate! Using a different voltage may cause the appliance to overheat.

Connect the appliance only to a grounded socket with protective contact and a 230-volt connection.

Once the appliance is connected, wait about one hour to allow the interior to cool down sufficiently before loading it with goods. After a power failure or if the appliance has been disconnected from the mains, wait at least 5 minutes before reconnecting and restarting the appliance!

If the appliance is restarted immediately after being switched off, the fuse may trip and interrupt the power supply. In addition, the compressor may become overloaded and damaged.

## STRUCTURE AND COMPONENTS




## INITIAL START-UP

**Before first use:**

Unpack the appliance, check it for completeness, and set it up (see *Installation*). Clean the appliance (see *Cleaning*).
Connect the cleaned refrigeration unit (see *Electrical connection*) to a 230 V socket.
Only once the desired temperature has been reached (place your hand on the air intake to ensure it is sufficiently cold), load the appliance with your goods.

## OPERATION – SETTINGS




**1. Switching on**

- Plug in the power cord.
- Set the power switch to [I].
- The appliance will display the current temperature.

---

**2. Unlocking / Locking the control panel**

- **Press the ▲ and ▼ keys simultaneously for 3 seconds.**
- The display shows:
  - PON (unlocked)
  - POF (locked)

---

**3. Setting the operating temperature**

1. Press the SET key → the display starts flashing.
2. Use ▲ or ▼ to set the desired temperature.
3. Press the SET key again to save.

---

**4. Manual defrosting**

- Press and hold the AUX key for 2 seconds.
- The defrost indicator light illuminates → defrost cycle active.

## CLEANING

Wipe the exterior and interior surfaces with a damp, soft cloth.
A mild dishwashing detergent may be used.
Wipe again with clean water (without detergent), then dry thoroughly.
The glass shelves can be removed for easier cleaning; clean them in the same way.
Do not use harsh, bleaching, caustic, or abrasive cleaning agents/tools, as these may damage or scratch the surfaces.
For the glass surfaces, a standard glass cleaner and a soft cloth may also be used. However, ensure that only the glass is moistened and that no large amounts of liquid run into the cabinet.

## MAINTENANCE

The refrigeration unit requires very little maintenance. Approximately every 2 months, check the ventilation slots for dirt. Brush them off with a soft brush while simultaneously removing the dirt with a vacuum cleaner.

## TAKING DEVICE OUT OF OPERATION / STORAGE / TRANSPORT


Remove all food, switch off the appliance, and unplug it.
Clean the appliance thoroughly inside and outside, then leave the door open to allow sufficient drying.
If the appliance is dry and will not be used for an extended period, store it in a dry, dust-free, and cool place. Ideally, cover the appliance or use the original packaging to protect it from damage.
Ensure the appliance is secured against children or pets climbing inside, as this could result in entrapment.
If only the packaging materials are stored, please note that components such as plastic bags, cardboard, and styrofoam parts can be dangerous for children if they play with them unsupervised (e.g., risk of suffocation).
For transportation, use the original packaging to optimally protect the appliance against shocks, sharp edges, weather conditions, etc. Do not tilt the appliance more than 45 degrees, do not expose it to moisture or rain, and avoid heavy impacts.
After transportation, the appliance must stand still for approx. 24 hours before being reconnected. Otherwise, malfunctions may occur, as the refrigerant and oil need time to redistribute and settle correctly.

## TROUBLESHOOTING

| Problem | Cause and Solution |
|---|---|
| The appliance does not work | - The appliance is not switched on → Check whether the plug is properly inserted and the unit is switched on<br>- Plug and/or cable are damaged → Contact your dealer or a qualified technician<br>- The fuse in the plug is blwon → Replace the fuse<br>- Internal wiring fault → Contact your dealer or a qualified technician |
| The appliance switches on, but the temperature ist too high/low | - Too much ice on the evaporator → Defrost the appliance<br>- Condenser clogged with dust → Clean the condenser<br>- Doors not properly closed → Check that the doors are closed and the door gaskets are intact<br>- Door gaskets damaged → Replace door gaskets<br>- Ambient temperature too high → Improve ventilation or move the appliance to a cooler location<br>- Unsuitable food stored in the appliance → Remove unsuitable items and clear any blockages on the fan<br>- The appliance is overloeaded -_> Reduce the amount of food stored in the appliance |
| Water is leaking from the appliance | - The appliance is not properly levelled → Adjust the screw feet so the appliance is level (Check for proper drainage)<br>- The drain outlet is blocked → Clean the drain outlet<br>- Water flow to the drain is obstructed → Level the appliance properly (check drainage)<br>- The water container is damaged → Contact your dealer or technician<br>- The drip tray is overflowing → Empty the drip tray (check drainage) |
| The appliance is unusually noisy | - Protective cover not removed → Remove the protective cover<br>- Loose nuts/screws → Tighten all nuts and screws is necessary<br>- The appliance is not installed on an even, stable surface → Place the appliance on a flate, stable surface |
| If the problem cannot be solved by these simple troubleshooting steps, please contact your dealer. | |


<u>The following are not malfunctions:</u>
The sound of running water may be heard when the refrigeration unit is operating. This is normal, as the refrigerant is circulating within the system.
During damp weather, condensation may form on the outside of the appliance. This is not a malfunction; the cause is high humidity. Simply wipe off the condensation with a cloth

## WIRING DIAGRAM 323-3106 Bakery Refrigerator B 800 TN

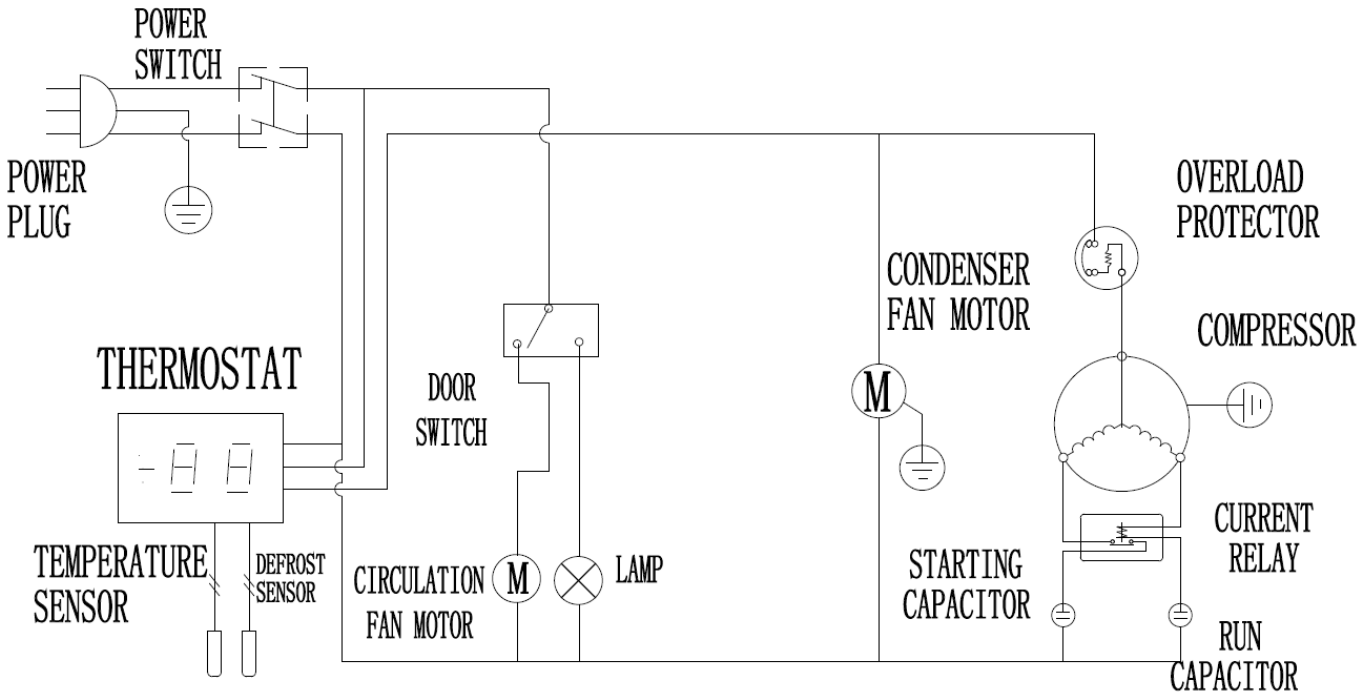



| Englischer Begriff | Deutscher Begriff |
|---|---|
| Power Plug | Netzstecker |
| Power Switch | Netzschalter |
| Thermostat | Thermostat |
| Temperature Sensor | Temperatursensor |
| Defrost Sensor | Abtausensor |
| Door Switch | Türschalter |
| Circulation Fan Motor | Umluftventilator-Motor |
| Lamp | Lampe |
| Condenser Fan Motor | Verflüssigerlüfter-Motor |
| Compressor | Kompressor |
| Overload Protector | Überlastschutz |
| Starting Capacitor | Anlaufkondensator |
| Run Capacitor | Betriebskondensator |
| Current Relay | Anlaufrelais |

## WIRING DIAGRAM 323-3108 Bakery Freezer B 800 BT

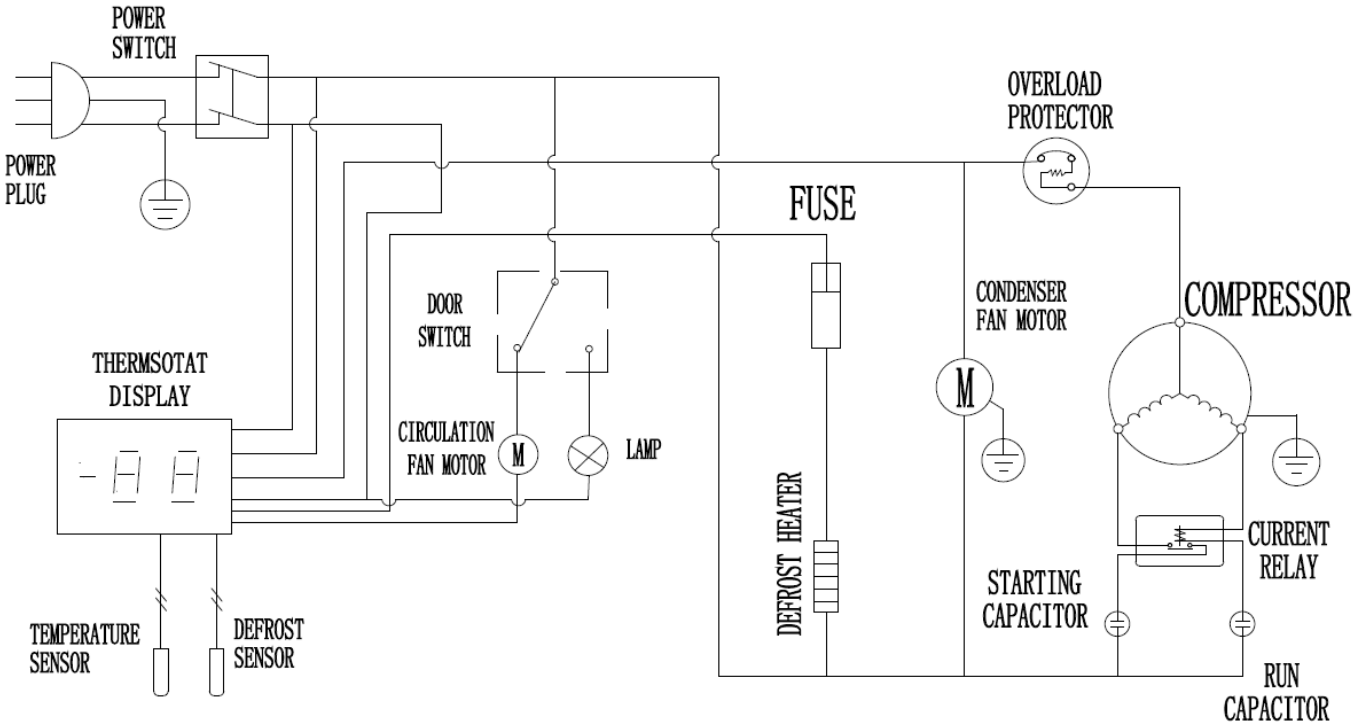


| Englischer Begriff | Deutscher Begriff |
|---|---|
| Power Plug | Netzstecker |
| Power Switch | Netzschalter |
| Thermostat Display | Thermostat-Anzeige |
| Temperature Sensor | Temperatursensor |
| Defrost Sensor | Abtausensor |
| Door Switch | Türschalter |
| Circulation Fan Motor | Umluftventilator-Motor |
| Lamp | Lampe |
| Fuse | Sicherung |
| Defrost Heater | Abtauheizung |
| Condenser Fan Motor | Verflüssigerlüfter-Motor |
| Compressor | Kompressor |
| Overload Protector | Überlastschutz |
| Starting Capacitor | Anlaufkondensator |
| Run Capacitor | Betriebskondensator |
| Current Relay | Anlaufrelais |


## EXPLODED VIEW: 323-3106 B 800 TN

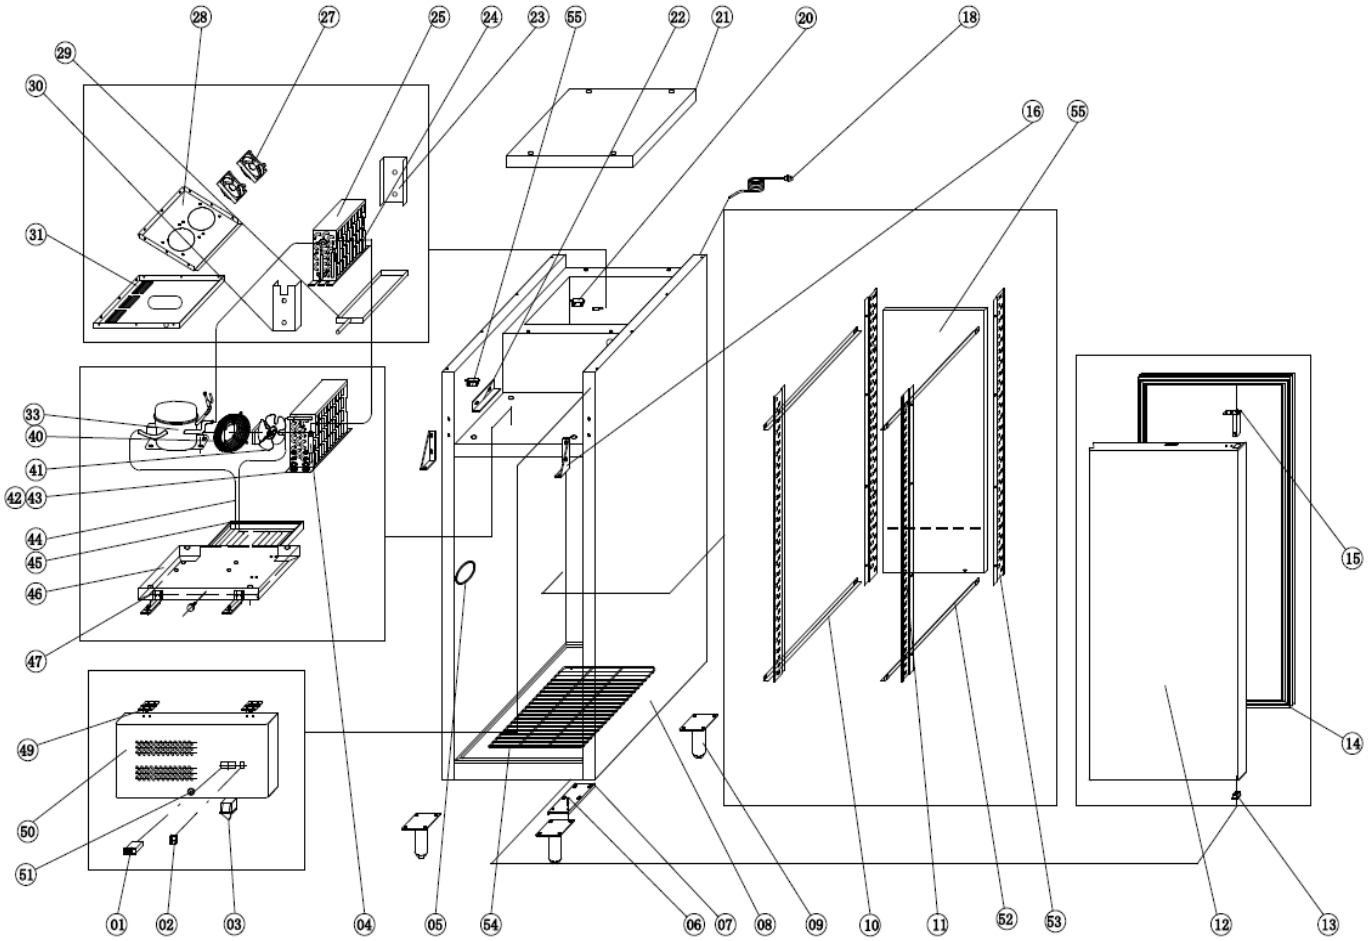

## EXPLODED VIEW – LEGEND: 323-3106 B 800 TN

| | | |
|---|---|---|
| 1 | Thermostat | Thermostat |
| 2 | Main switch | Hauptschalter |
| 3 | Door switch | Türschalter |
| 4 | Filter drier | Filtertrockner |
| 5 | Lamp | Lampe |
| 6 | Down hinge axis | Unterer Scharnierbolzen |
| 7 | Down hinge | Unteres Scharnierprofil |
| 8 | Body | Gehäuse |
| 9 | Feet | Füße |
| 10 | Guide left | Laufleiste links |
| 11 | Front support | Vordere Stütze |
| 12 | Door | Tür |
| 13 | Down hinge axis jacket | Untere Scharnierbolzenaufnahme |
| 14 | Gasket | Dichtung |
| 15 | Door spring | Türfeder |
| 16 | Up hinge left | Oberes Scharnier links |
| | Up hinge right | Oberes Scharnier rechts |
| 18 | Plug | Zuleitung |
| 20 | Sensor fixed box | Sensorbefestigungsbox |
| 21 | Top | Deckel |
| 22 | Fixing strip | Befestigungsleiste |
| 23 | Evaporator back guide | Hinter Verdampferführung |
| 24 | Evaporator | Verdampfer |
| 25 | Evaporator cover | Verdampferabdeckung |
| 27 | Evaporator fan | Verdampferlüfter |
| 28 | Fan support | Lüfterhalterung |
| 29 | Evaporator water pan | Verdampferwasserwanne |
| 30 | Evaporator front guide | Vordere Verdampferführung |
| 31 | Airflow duct board | Luftkanalplatte |
| 33 | Compressor | Kompressor |
| 40 | Basket guard grill | Lüfter-Schutzgitter / Lüfter-Halter |
| 41 | Condenser fan | Kondensatorlüfter |
| 42 | Filter | Filter |
| 43 | Condenser | Kondensator |
| 44 | Discharge tube | Heißgasrohr |
| 45 | Condensate evaporator pan | Kondensatverdunsterwanne |
| 46 | Unit board | Montageplatte |
| 47 | Front panel fixed clip | Bedienblendenhalterung |
| 49 | Hinge | Scharnier |
| 50 | Front panel | Bedienblende |
| 51 | Lock | Schloss |
| 52 | Guide right | Laufleiste rechts |
| 53 | Back support | Hintere Stütze |
| 54 | Bottom shelf | Bodenrost |
| 55 | Air flow duct board | Luftkanalplatte |

## EXPLODED VIEW: 323-3108 B 800 BT

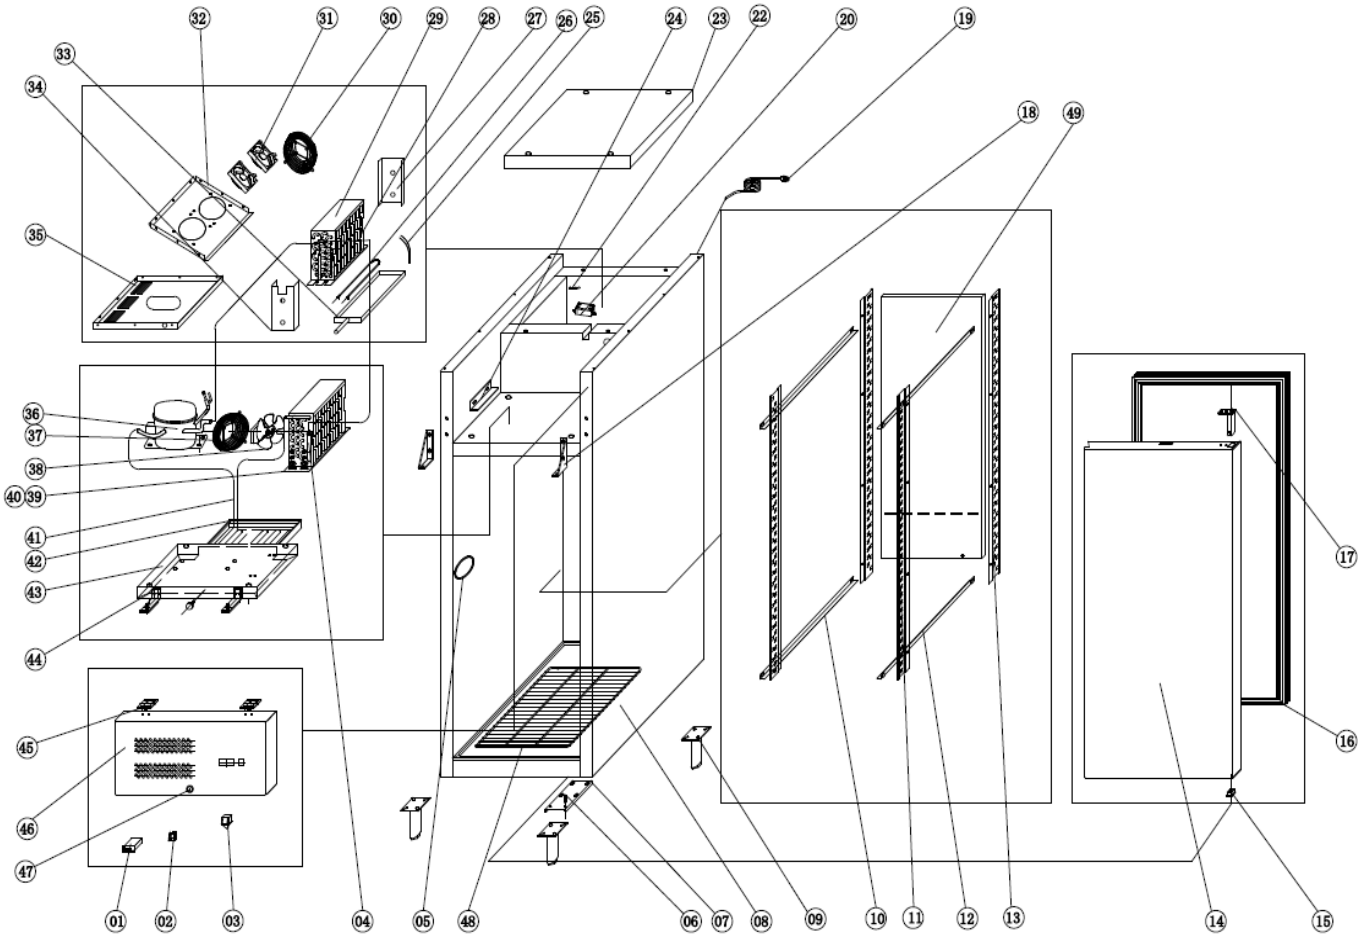

## EXPLODED VIEW – LEGEND: 323-3108 B 800 BT

| | | |
|---|---|---|
| 1 | Thermostat | Thermostat |
| 2 | Main switch | Hauptschalter |
| 3 | Door switch | Türschalter |
| 4 | Filter drier | Filtertrockner |
| 5 | Lamp | Lampe |
| 6 | Down hinge axis | Unterer Scharnierbolzen |
| 7 | Down hinge | Unteres Scharnierprofil |
| 8 | Body | Gehäuse |
| 9 | Feet | Füße |
| 10 | Guide left | Laufleiste links |
| 11 | Front support | Vordere Stütze |
| 12 | Guide right | Laufleiste rechts |
| 13 | Back support | Hintere Stütze |
| 14 | Door | Tür |
| 15 | Down hinge axis jacket | Untere Scharnierbolzenaufnahme |
| 16 | Gasket | Dichtung |
| 17 | Door spring | Türfeder |
| 18 | Up hinge left | Oberes Scharnier links |
| | Up hinge right | Oberes Scharnier rechts |
| 19 | Plug | Zuleitung |
| 20 | Sensor fixed box | Sensorbefestigungsbox |
| 22 | Room sensor | Temperaturfühler |
| 23 | Top | Deckel |
| 24 | Fixing strip | Befestigungsleiste |
| 25 | Protector for heating element | Schutz für Heizelement |
| 26 | Defrosting heating element | Abtauheizelement |
| 27 | Evaporator back guide | Hintere Verdampferführung |
| 28 | Evaporator | Verdampfer |
| 29 | Evaporator cover | Verdampferabdeckung |
| 30 | Wall ring | Schutzgitter für Verdampferlüfter |
| 31 | Evaporator fan | Verdampferlüfter |
| 32 | Fan support | Lüfterhalterung |
| 33 | Evaporator water pan | Verdampferwasserwanne |
| 34 | Evaporator front guide | Vordere Verdampferführung |
| 35 | Airflow duct board | Luftkanalplatte |
| 36 | Compressor | Kompressor |
| 37 | Basket guard grills | Lüfter-Schutzgitter / Lüfter-Halter |
| 38 | Condenser fan | Kondensatorlüfter |
| 39 | Filter | Filter |
| 40 | Condenser | Kondensator |
| 41 | Discharge tube | Heißgasrohr |
| 42 | Condensate evaporator pan | Kondensatverdunsterwanne |
| 43 | Unit board | Monageplatte |
| 44 | Front panel fixed clip | Bedienblendenhalterung |
| 45 | Hinge | Scharnier |
| 46 | Front panel | Bedienblende |

| | | |
|---|---|---|
| 47 | Lock | Schloss |
| 48 | Bottom shelf | Bodenrost |
| 49 | Air flow duct board | Luftkanalplatte |

## PACKAGING DISPOSAL



Please separate the packaging materials accordingly and take them to the appropriate collection points for recycling and environmental protection.

## DEVICE DISPOSAL



Once the appliance has reached the end of its life, please dispose of it properly at a designated collection point for electrical devices.
Electrical appliances do not belong in household waste.
Your local authority can provide information on the locations and opening hours of disposal sites.
This is the only way to ensure that old appliances are disposed of and recycled correctly.
Thank you!

**Made in P.R.C for:**
SARO Gastro-Products GmbH
Sandbahn 6, 46446 Emmerich am Rhein, Germany
Tel. +49 (0) 2822 9258-0
Fax +49 (0) 2822 18192
E-Mail info@saro.de
Web www.saro.de

**Note:** Technical, design, and model changes as well as errors are subject to change without notice.